




DIGITAL BATTERY CHANGE

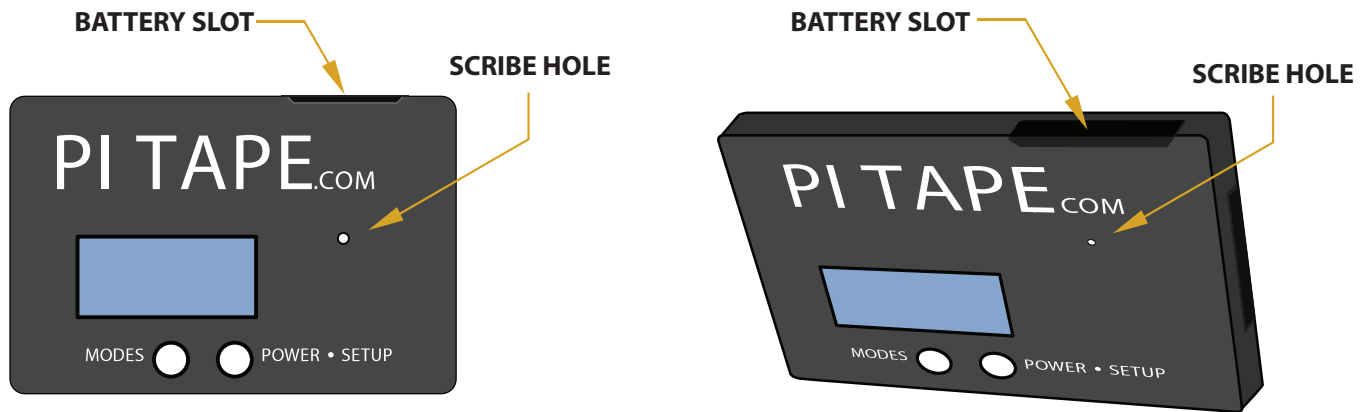

Instructions for Battery Change:

The top surface of the black digital housing has a small hole in it through which a small pointed scribe can be used to remove battery.

Insert the pointed end of scribe into the hole and press it against the battery.

Next, pivot the scribe so that the battery will slide towards the open slot in the black casing and remove the old battery.

To install a new battery, use a small pair of needle nose pliers (or tweezers) to grasp the battery at its edges and carefully push the battery into the slot, with the + symbol facing upward.

Part number for battery is CR2032.

ADVISORY: Should any repairs be needed, please contact us.